




---

 
## Important Safety Information

To prevent the unexpected danger or damage, please read this information before installing and repairing the phone. There are "Caution" and "Warning", it means as follows;


	<b>Warning</b> This means danger. It means that it could cause bodily injury or death.
	<b>Caution</b> You are capable of doing something that might result in physical injury or equipment damage.

-  This means reader be careful. In this situation, you might do something that it could result in danger.
- After reading the manual, please keep it ready for the next user.

.....  **Warning** .....

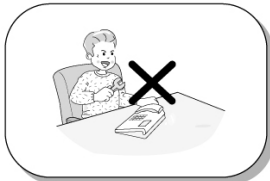

 Only trained and qualified service personnel must install, replace or service the phone.

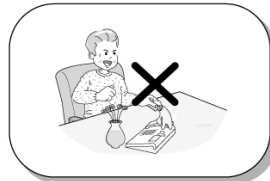


Do not spill liquid like water on the phone. **If so, call for the service center. It may result in a fire or an electric shock.**



When smoke or smell something burning, unplug the power cord or the phone line. Call for service center. **If left intact for long time, it may be a cause of fire of electric shock.**



 If the power adapter is used, do not touch the plug with wet hands. **It may result in a fire or an electric shock.**

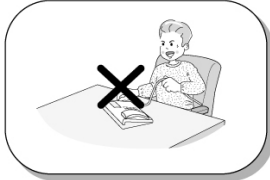

Do not tug the power cord or the phone line. **It may result in a fire, an electric shock or equipment damage.**




When the lightning flashes heavily, don't touch the power cord or the phone line. **It may result in a fire or an electric shock.**

---


## Important Safety Information

 ..... ⚠ Warning .....

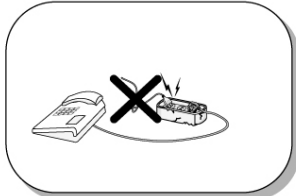


If the power adapter is used, don't use the damaged power cord and a wall outlet. It may result in a fire or an electric shock.

 
..... ⚠ Caution .....

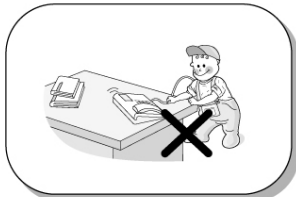

 
Install the phone in an area that children can not reach at. It may injure children or result in equipment damage.

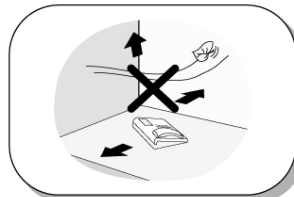

 
Choose a site with an air-conditioned area. It may result in equipment damage.

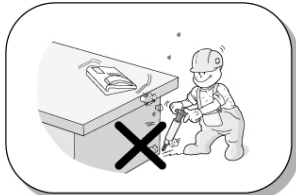

 
Avoid placing the phone in a vibrating area. If not, It may result in equipment damage.

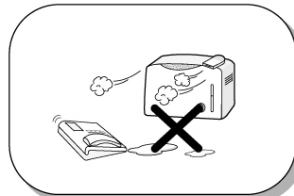

 Choose a site with a dry and well-ventilated area. It may result in equipment damage.

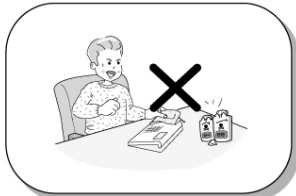

 Avoid exposure to a volatile matter such as benzene, alcoholic and acetone. It may be a cause of fire, transformation and discoloration.

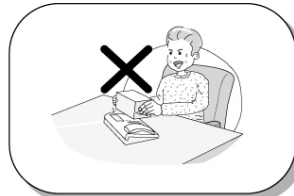

Do not put the heavy things on the phone. It may be a cause of equipment damage.


---

## Important Safety Information

 
..... ⚠ Caution .....




Do not drop or throw the phone. **It may be a cause of an accident, injury or breakdown.**

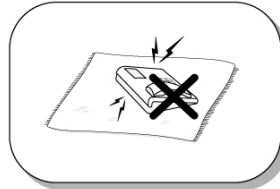

 
Avoid placing the phone in the site that the ESD should occur. **It may result in equipment damage.**

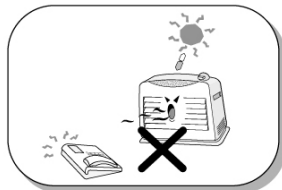

 
Do not install in the place where shines on the rays of the sun or is near the heating appliance. **It may be a cause of fire or breakdown.**

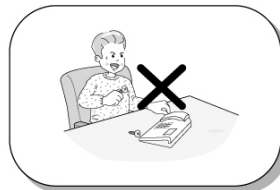

 
Do not insert a metallic thing or a foreign substance into the phone. If so, turn off the power, unplug the power cord and call for the service center. **It may result in a fire or an electric shock.**

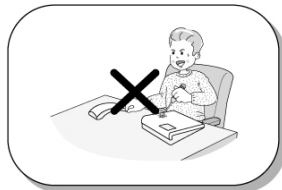

 Do not short by inserting a screwdriver or pincette into hole. **It may result in a fire or equipment damage.**

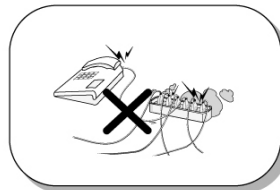

 Do not plug a lot of the power cord in the outlet. **It may result in a fire or an electric shock.**

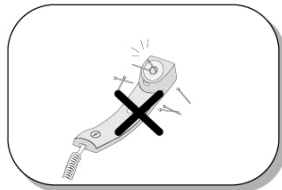

Check for pins or other small metal objects before using handset. **The ear cap region of the telephone may attract and retain those.**

※ The above picture may differ from the actual products.

---

## LDP-7000 Series Model

LDP-7008D



LDP-7004D



 
LDP-7004N



---

## Input/Output Devices and Button

**LDP-7008D**

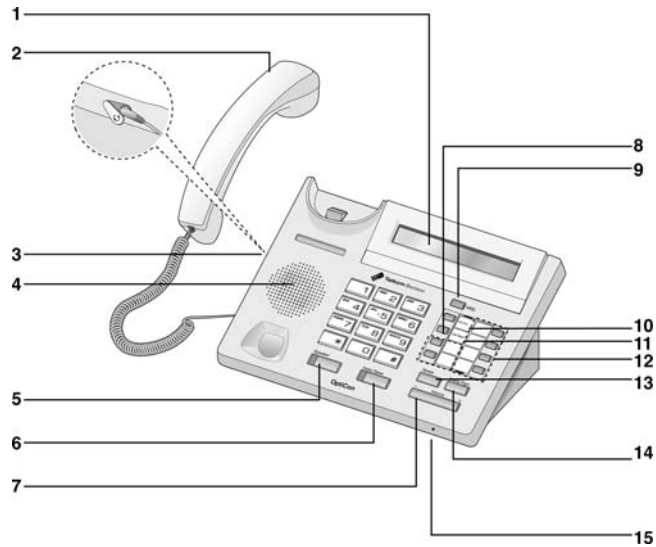


- |           |  |
|-----------|--|
| <b>1</b>  | <b>LCD Display</b>                     |
| <b>2</b>  | <b>Handset</b>                         |
| <b>3</b>  | <b>Headphone Socket (Ear/Mic Mode)</b> |
| <b>4</b>  | <b>Speaker</b>                         |
| <b>5</b>  | <b>Speaker Button</b>                  |
| <b>6</b>  | <b>Hold/Save Button</b>                |
| <b>7</b>  | <b>Volume Button</b>                   |
| <b>8</b>  | <b>Loop Button</b>                     |
| <b>9</b>  | <b>Message Waiting LED</b>             |
| <b>10</b> | <b>Dnd/Fwd Button</b>                  |
| <b>11</b> | <b>Call Back Button</b>                |
| <b>12</b> | <b>Flexible Button</b>                 |
| <b>13</b> | <b>Speed Button</b>                    |
| <b>14</b> | <b>Trans/Pgm Button</b>                |
| <b>15</b> | <b>Handsfree Microphone</b>            |

---

## Input/Output Devices and Button
 
### LDP-7004D

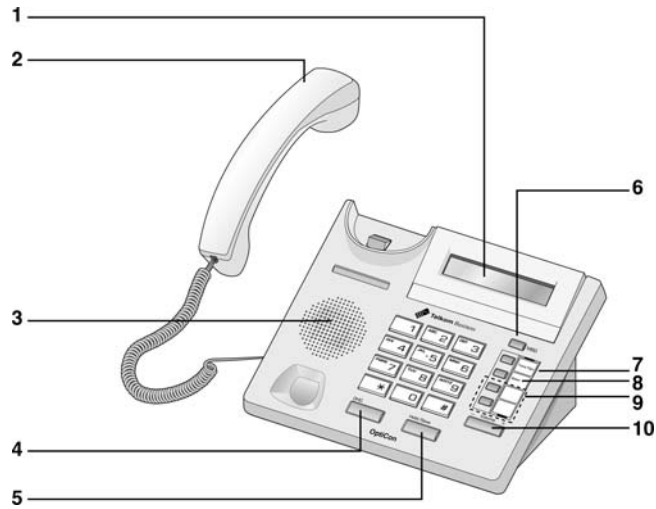

- |    |                              |
|----|------------------------------|
| 1  | LCD Display (LDP-7004D only) |
| 2  | Handset                      |
| 3  | Speaker                      |
| 4  | OHD Button                   |
| 5  | Hold/Save Button             |
| 6  | Message Waiting LED          |
| 7  | Trans/Pgm Button             |
| 8  | Speed Button                 |
| 9  | Flexible Button(Loop Button) |
| 10 | Volume Button                |

---

## Input/Output Devices and Button

Item	Description
<b>Handset</b>	Used for handset call.
<b>Earphone-Jack</b>	The optional earphone into the handset to provide a hands-free phone conversation.
<b>Speaker</b>	Outputs tones and voice.
<b>Speed Button</b>	Used to access speed dialing, speed programming, saved number redial.
<b>Dnd/Fwd Button</b>	<p>The DND (Do Not Disturb) feature blocks all incoming calls. When DND is active, the red LED in this button is illuminated.</p> <p>It is also used to activate call forward, e.g. to another station or voicemail. When call forward is activated, the red LED flashes.</p>
<b>Hold/Save Button</b>	This button put a call on hold or save information when programming.
<b>Speaker Button</b>	Speaker toggles the speakerphone state, and the red LED is illuminated when the speakerphone is active.
<b>OHD Button</b>	On Hook Dial allows 7004N&D users to dial and monitor call state without lifting the handset.

 
---

## Input/Output Devices and Button

Item	Description
<b>LCD Display</b>	Shows dialed and incoming numbers (where applicable) and on the 7008D it will display other information about call status, dialing directories and message information.
<b>Trans/PGM Button</b>	This button is used to initiate a call transfer (TRS) or to enter programming mode (PGM).
<b>Flexible Button</b>	The last two (7004D/7004N) or six (7008D) flex buttons can be assigned outside line presentation or as one-touch feature access. (See codes at rear of guide)
<b>Call back Button</b>	A station can initiate a call back request to a busy station. Once that station becomes idle, the initiating station is signaled.
<b>Volume Button</b>	The volume button adjusts the audio levels for ringing, handset and speakerphone or OHD functions .
<b>Hand-free Microphone</b>	Microphone for hands-free speakerphone function.
<b>Loop Button</b>	Loop Button(s) are required for presentation of outside lines to the telephone. At least one is required per telephone.

---

## Cable Connection

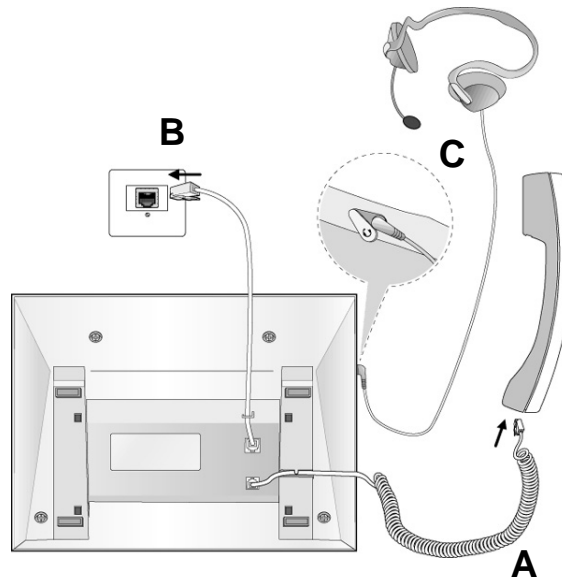

### Cable connection

**A** Connect the telephone cord (curly cord) to the handset and the other end to the handset jack at the bottom of the telephone.

**B** Connect the line cable to the port at the bottom of telephone and the other end to the wall socket.

**C** Connect the Headphone to the headphone jack on the left side of the telephone.  
(As viewed from the front.)

**※ Note:** LDP-7004N and 7004D does not support integral headphone mode.

---

## Basic Function

### Placing an Outside Call

- Lift handset, press OHD/Speaker or dial from live keypad.
- Dial **9**.
- Dial the desired number.

### Placing an Intercom Call

- Lift handset, press OHD/Speaker or dial from active keypad.
- Dial the station number.

### Placing an Outside Call on Hold

- While connected to an external call, press [HOLD] button.

### Retrieving a Outside Call on Hold

- Press the flashing flexible button.
- ※ **Note:** calls will automatically recall after pre-defined time

### Re-directing an Incoming Call (Call Pick-up)

- When you hear another phone ringing in your area,
- Lift handset, press OHD/Speaker or dial from live keypad.
  - Dial **7**.
  - Dial the extension number of the ringing station.
  - You will be connected automatically to the caller.

### Answering an Waiting Call

- Press the flashing CO button.

---

## Basic Function

### Call Wait (Camp-on)

- After receiving station busy tone, dial \* .
- Camp-on tone is heard in the called station.
- When called party answers, talk or hang up to transfer another call to the called party.

### Last Number Redial

- Lift handset, press OHD/Speaker or dial from active keypad.
- Dial **5 5 2** or press speed button + dial ' \* ' + Hold/Save button.

### Storing Station Speed Dial Numbers

- Press the [TRANS/PGM] and [SPEED] Button.
- Dial speed bin number. Range (XXX-ZZZ)
- Dial speed dial number you wish to store.
- Press the [HOLD/SAVE] button.
- Enter the name associated to the number.
- Press the [HOLD/SAVE] button.
- You will hear confirmation tone.

### Using Station Speed Dial Numbers

- Press the [SPEED] button
- Dial the desired speed dial bin number.

### Group Call Pick-up






When hearing an unattended phone ringing in your area,

- Lift handset.
- Dial **5 5 6**.
- You will be connected automatically to the caller.
- ※ **Note:** you must be in the same pick-up group.

---

## Code for Flexible Button Programming

### Register of Flexible Button

- 1** **Trans/Pgm**  
 Press the [Trans/Pgm] button.
- 2**  Press the [Flexible] button.
- 3** **Trans/Pgm**  
 Press the [Trans/Pgm] button.
- 4**  Enter code number.
- 5** **Hold/Save**  
 Press the [Hold/Save] button.

---

## Code for Flexible Button Programming

### Button Assignment for LDP-7004N/4D,8D

Function	Code Number
CONF button	TRANS/PGM + 91
CALLBK button	TRANS/PGM + 92
DND/FWD button	TRANS/PGM + 93
FLASH button	TRANS/PGM + 94
MUTE button	TRANS/PGM + 95
MON button	TRANS/PGM + 96
REDIAL button	TRANS/PGM + 97
Ring Type	TRANS/PGM + 11
Enblock mode	TRANS/PGM + 14
Ear-Mic Headset	TRANS/PGM + 17
ICM Ring	TRANS/PGM + 18
CO Ring	TRANS/PGM + 19
COS Down	TRANS/PGM + 21
Walking COS	TRANS/PGM + 23
Auth. Code Register	TRANS/PGM + 31
Auth. Code Change	TRANS/PGM + 32
Set Wake-up Time	TRANS/PGM + 41
Set Pre-selected MSG	TRANS/PGM + 51
Set Customer MSG	TRANS/PGM + 52
Two way Record	TRANS/PGM + 54
Record User Greeting	TRANS/PGM + 61
Listen Time & Date	TRANS/PGM + 62
Listen Station Number	TRANS/PGM + 63
Listen Station Status	TRANS/PGM + 64
Record Page MSG	TRANS/PGM + 65
Erase User Greeting	TRANS/PGM + 66
Erase Page MSG	TRANS/PGM + 67
LCD Display Language	TRANS/PGM + 71
Background Music	TRANS/PGM + 73
Register Station Name	TRANS/PGM + 74
Speakerphone/Headset	TRANS/PGM + 75
Headset Ring Mode	TRANS/PGM + 76
Account Code	TRANS/PGM + 80
DID Call Wait	TRANS/PGM + 81
ICM Hold	TRANS/PGM + 83
LOOP button	TRANS/PGM + 84
Camp-on	TRANS/PGM + 85
Call Log Button	TRANS/PGM + 57
Activate CONF Room	TRANS/PGM + 43
Deactivate CONF Room	TRANS/PGM + 44